

**IMPORTANT: READ INSTRUCTION BEFORE STARTING
INSTALLATION**

TO INSTALL:


1. Close movable panel
2. Hold pin in desired location and determine that the glass will not interfere with installation **Warning:** Do not touch glass with drill bit
3. Drill a 1/8" hole through meeting stiles from interior side of window. **Note:** Do not drill through exterior wall of outer stile
4. Insert pin hole
5. Fasten chain and holder
6. Allow slack in chain for easy removal of pin from lock position
7. Use a 1/16" drill bit for screw hole

**IMPORTANTE: LEER ANTES DE INSTRUCCIONES DE
INSTALACIÓN DE INICIO**

PARA INSTALAR:

1. Cerre el panel desilzante
2. Mantenga el eje en el lugar que desee y asegúrese de que ael vidrio no interfiera en la instalación. **Advertencia:** No toque el vidrio con broca
3. Taladre un orificio de 3 mm a través de los montantes adyacentes a partir del lado interior de la ventana. **Nota:** No taladre a través de la pared el montante exterior.
4. Inserte el eje en el orificio
5. Fije la cadena y soporte
6. Conceda un alguno juego en la cadena, para permitir la salida facil de eje cuando este esté bloqueado
7. Utilice una broca de 1.5 mm para los orificios de tornillos

#171- Sliding Glass Door Nite Pin

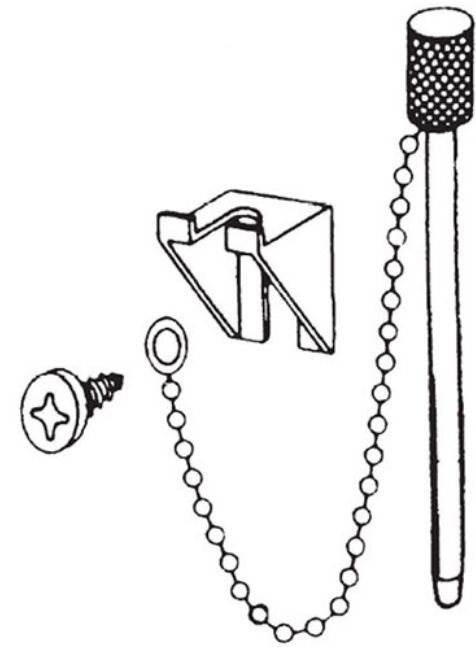

Barton Kramer Inc.

Miami, Florida

