




#941  
P.A. SLIDE BAR GUIDE

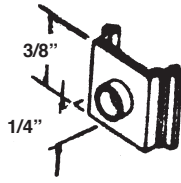


#942  
SLIDE BAR GUIDE

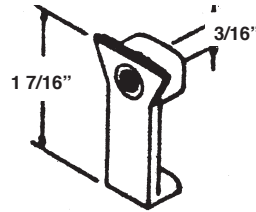


#946  
KELLER A.T.W. SLIDE BAR GUIDE

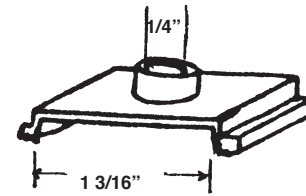

#1032  
ABC BOTTOM VENT LATCH

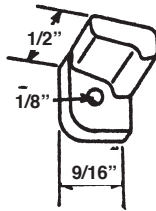

#1033  
ABC INTERMEDIATE VENT LATCH

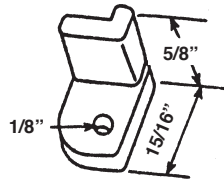


#1035  
STANLEY TOP VENT BLOCK



#1036  
STANLEY INTERMEDIATE VENT LATCH PAIRS




#1039  
ANDERSON VENT LOCK (PRS.)

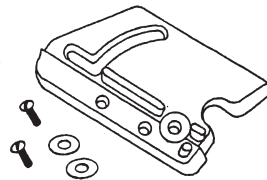


#1109  
SUPERIOR CAM LOCK W/RIVET




#1335  
YALE ATW VENT LOCK

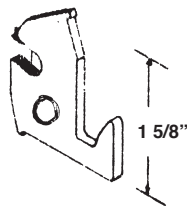


#1336  
HARCAR ATW VENT LOCKS-PAIRS

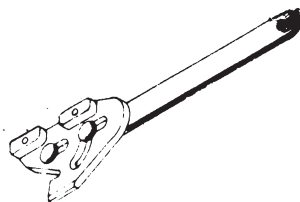


#1338  
AAA WINDOW VENT HINGE-PAIRS

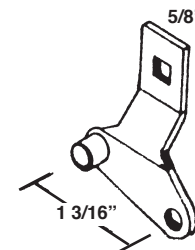


#1339  
TUCKER T.M. VENT LOCK-PAIRS

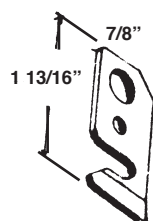

#1340  
TUCKER T.M. VENT LOCK-PAIRS

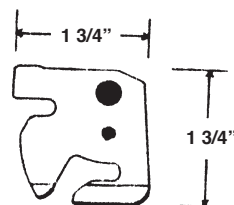


#1338  
AAA WINDOW VENT HINGE-PAIRS

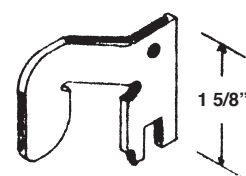


# Slide Guide & Vent Locks


#309  
KELLER A.T.W. VENT PIN

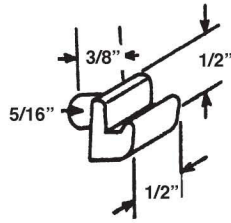


#1342  
KELLER VENT LOCKS-PRS

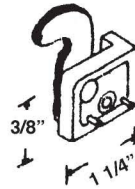


#1344  
ABC ATW CONTROL  
BRACKETS

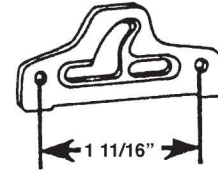


#1203  
STANLEY SLIDE GUIDE

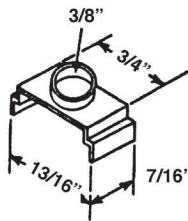


#10137  
YALE SLIDE BAR GUIDE

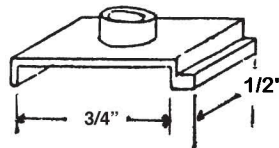


#1038  
STANLEY CONTROL  
BRACKET

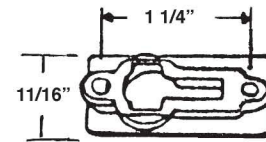

#10015  
PAN AM VENT LOCK PAIRS

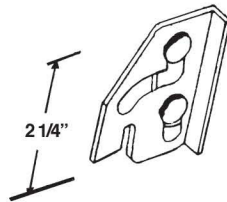


#10014  
HARCAR PLASTIC VENT LOCK PRS.

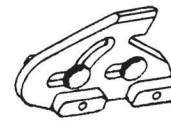


RIVET #204


#10381  
1/4" CORNER FOR WINDOW

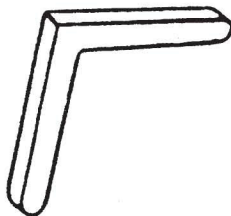

#10382  
3/16" CORNER FOR WINDOW

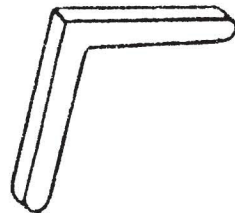

#10383  
1/8" MIAMI SLIDE CORNERS

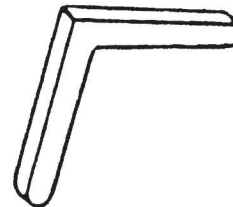

#10602  
1/8" MIAMI SLIDE CORNERS  
PAIRS

